



Online store WWW.LYNXGEAR.LV
Company: SIA LATLYNX
info@lynxgear.lv, +371 26159668
Reg. No. 45403038162, VAT Reg. No.
LV45403038162,
Legal address: Baznicas iela 8,
Aizkraukle, Aizkraukles novads,
LV-5101, LATVIJA
Bank Account: LV87UNLA0050021387494
AS SEB Bank, SWIFT: UNLALV2X

ORDER CONFIRMATION

Not Rated Yet

Sales price 23,95 €

Salesprice with discount

Incl. VAT 21%: 4,16 €



1-4 Weeks



Description

Product features:

1. Two steps - coarse and fine - sharpening design.
2. Unique sharpening wheel design, convenient to sharpen back and forth.
3. Classic model and stainless steel handle adornment highlights fashionable home style.
4. Stainless steel plate with EVA non-slip base ensure the safety of sharpening.

Using instruction:

1. Place the knife sharpener on a stable surface when using.
2. Complete one or both of the following steps depending on how blunt the blade is.
Step 1: Coarse sharpening: used to repair the serious damaged knife, suitable for blunt knife.
Place knife on the sharpening slot, using slight downward pressure, run the blade from its heel to its point through the slot. Repeat 3 to 5 times. Sharpen the tools every six months or as required.
Step 2: Fine honing: it's a necessary step which used to eliminate the burrs on the knife and polish it. Please refer to the step 1 regarding to the use method. It is recommended to do it approximately once a week to keep your blade sharp at any time.
3. Clean the knife with the water or wiper and dry after use; clean the knife sharpener with non-abrasive brush.



Online store WWW.LYNXGEAR.LV
Company: SIA LATLYNX
info@lynxgear.lv, +371 26159668
Reg. No. 45403038162, VAT Reg. No.
LV45403038162,
Legal address: Baznīcas iela 8,
Aizkraukle, Aizkraukles novads,
LV-5101, LATVIJA
Bank Account: LV87UNLA0050021387494
AS SEB Bank, SWIFT: UNLALV2X

ORDER CONFIRMATION

Caution:

1. Do not use the knife sharpener to sharpen serrated blades or scissors.
2. To avoid damaging the knife, please sharpen the knife slightly.
3. Do not put the sharpener in the dishwasher or submerge in water.
4. Please put the knife sharpener and knife beyond the reach of children to avoid any accidents.